



VD-54

CRONÓGRAFO CON TRES MINICARÁTULAS

THREE-EYE CHRONOGRAPH




VICEROY







CRONÓGRAFO CON TRES MINICARÁTULAS

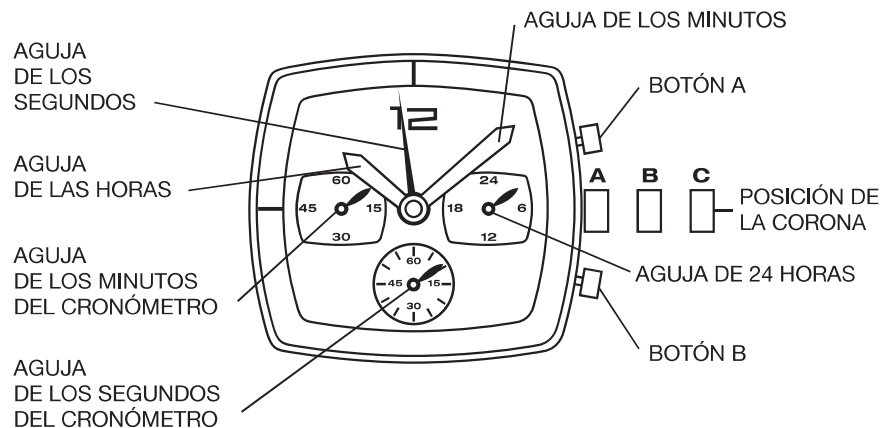


Como utilizar el cronómetro

El cronómetro puede medir hasta 60 minutos en segundos.


* Antes de utilizar el cronómetro, asegúrese de que, al ponerlo en cero, las agujas vuelvan efectivamente a la posición "0". (Consulte "Puesta a cero del cronógrafo").



MEDICIÓN ESTÁNDAR

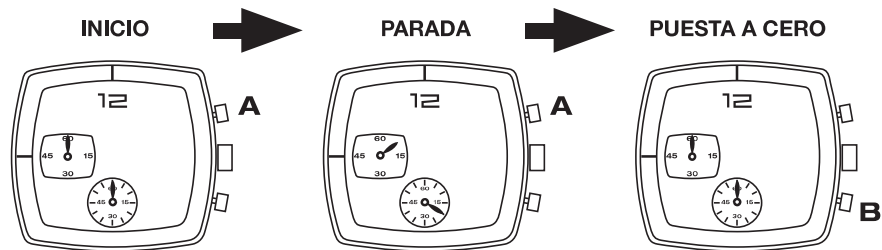


MEDICIÓN DEL TIEMPO TRANSCURRIDO ACUMULADO

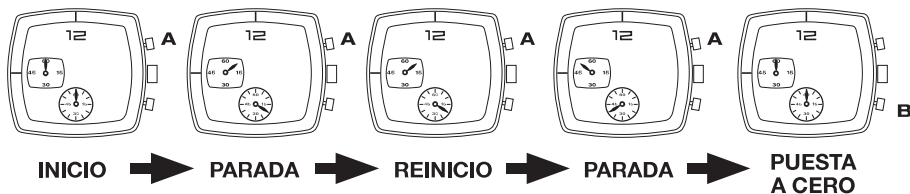

EL REINICIO Y LA PARADA DEL CRONÓMETRO
PUEDEN REPETIRSE PULSANDO "A"



MEDICIÓN DE TIEMPO DIVIDIDA

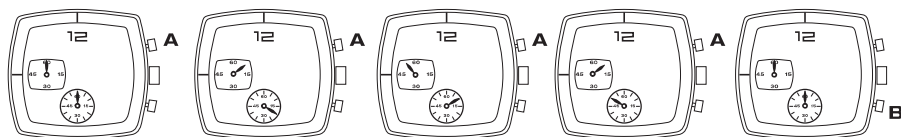

INICIO ➡ INTERRUPCIÓN ➡ REANUDACIÓN ➡ PARADA ➡ PUESTA A CERO

**LA MEDICIÓN Y LA REANUDACIÓN DEL TIEMPO DIVIDIDO
PUEDEN REPETIRSE PULSANDO "B"**



Puesta a cero del cronógrafo

Este procedimiento debería ejecutarse cuando la aguja de los segundos del cronógrafo no vuelve a la posición "0" tras la puesta a cero del cronógrafo, incluso después de haber cambiado la batería.

1. Tire de la corona hasta la 2ª posición.
2. Pulse el botón "A" para poner la aguja de los segundos del cronógrafo en posición "0".
3. Las agujas del cronógrafo avanzan rápidamente si se mantienen pulsados "A" o "B".
4. Tras la puesta a cero, vuelva a fijar la hora y coloque la corona en su posición normal.






CONDICIONES DE VALIDEZ DE LA GARANTÍA

El certificado de garantía tiene dos años de validez a partir de la fecha de compra. Se excluyen de la garantía las roturas accidentales o, de todas formas, las debidas a un uso incorrecto del reloj. La garantía caduca automáticamente cuando el reloj es abierto por personaas no cualificadas y no autorizadas. Las correas, los cristales y las pilas para los relojes se excluyen de la garantía. Esta garantía es válida si la fecha de compra está confirmada por el sello del vendedor en el mismo certificado de garantía debidamente cumplimentado. En el caso de sufrir un daño incluido en la garantía, lleve el reloj al establecimiento de compra.





THREE-EYE CRONOGRAPH

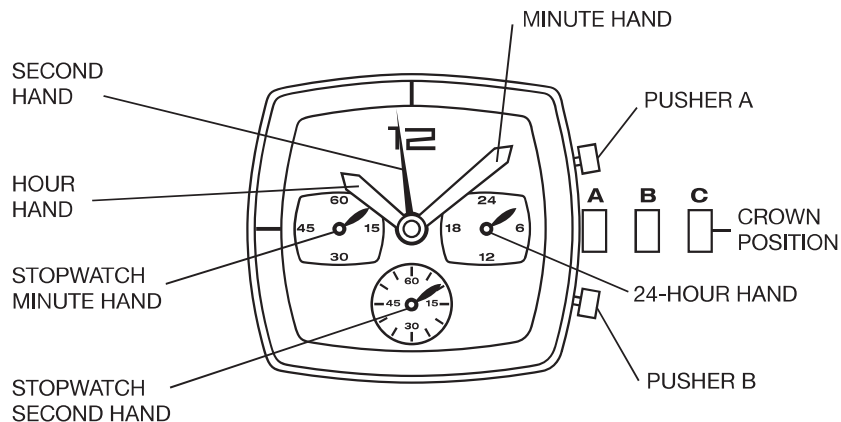


How to use the stopwatch

The stopwatch can measure up to 60 minutes in seconds.


* Before using the stopwatch, make sure that the stopwatch hands return to "0" position when it is reset. (Refer to "Cronograph reset").



STANDARD MEASUREMENT

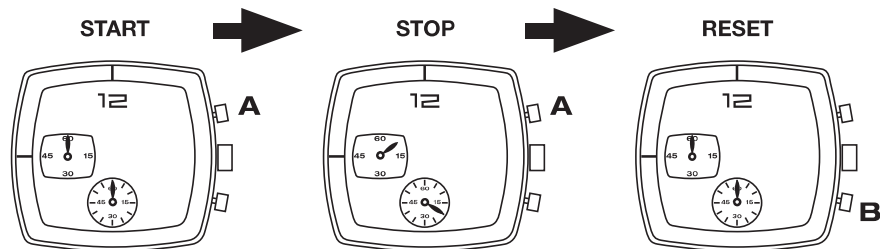


ACCUMULATED ELAPSED TIME MEASUREMENT

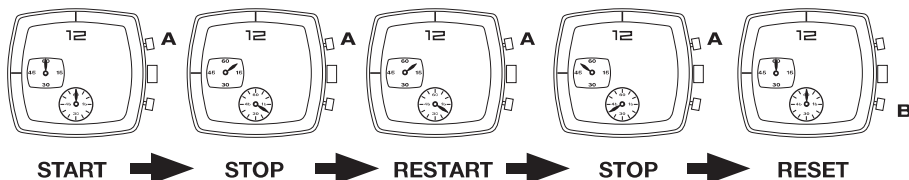

RESTART AND STOP OF THE STOPWATCH
CAN BE REPEATED BYPRESSING "A"



SPLIT TIME MEASUREMENT

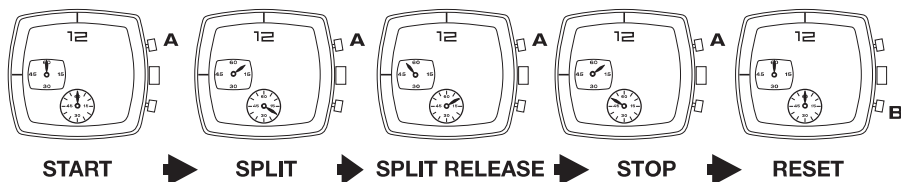

MEASURE AND RELEASE OF THE SPLIT TIME
CAN BE REPEATED BY PRESSING "B"



Cronógraph reset

This procedure should be performed when the cronograph second hand does not return to the 0 second position after the chronograph has been reset, including after the battery has been replaced.

1. Pull the crown out to the 2nd position.
2. Press pusher "A" to set the chronograph second hand to the "0" position.
3. The chronograph hands can be advanced rapidly continuously pressing pusher "A" or "B".
4. Once the hands have been zeroed, reset the time and return the crown to its normal position.





VALIDITY GUARANTEE CONDITIONS

*The guarantee certificate is valid for two year from the date of purchase.
This guarantee does not cover defects arising from accidental damage or misuse of the watch and is automatically lost if the watch is opened by not qualified and authorised people. Straps, glasses, and batteries of your watch are not under guarantee. This guarantee is valid only if the date of purchase is confirmed by the dealer's official stamp, specifying the date and the dealer's name, borne of the guarantee certificate completely filled-in. For any claim under this guarantee the watch must be returned to the dealer.*







VICEROY

